

# Touchwood too Orchid & Plant Supports


## Plant Basket



## Instructions:

### Instructions:

- 1 Prior to assembling the Plant Basket and to create the best effect, it is advisable to lay the cane out for a while to allow the cane to relax into its natural shape. Your plants should ideally be planted in the pot, with soil approx 10cm from the top of the pot, with soil firmed which will help to provide a firm base for the plant basket.
- 2 Push the stems firmly together (four stems).
- 3 Locate the length of cane cut to 1.5m and cut the remainder of the cane into 6 x 1.5m lengths.
- 4 Take the short piece of cane (55cm long) and create the top swirl by lightly marking the centre of the length of cane and pushing it through the single hole at the top of the stem.
- 5 Pull the cane through the top hole and locate the mark on the cane within the top hole of the stem.
- 6 Fit the O ring onto the stem as displayed >
- 7 Take the cane and without kinking it, pull round to locate the cane on the opposite side and into next hole down the stem. Take the other end of the cane and complete the swirl by repeating the process, leaving at least 1cm of cane protruding through the stem on each side.
- 8 Push the stem fully into the soil in the centre of the plant pot to provide a rigid support (you should now have the top three stems above the soil in the pot).
- 9 Take a 1.5m length of cane and pass one end through the O ring until you reach half way.
- 10 Take one end of the cane and push into the soil down the inner edge of the plant pot until you create the basket shape and the cane is held in place by the soil and repeat on the opposite side of the pot.
- 11 Continue to position the cane, ideally by placing the first loop of cane from 12 to 6 o'clock, loop 2 from 3 to 9 o'clock, and continue to equally space the loops to complete your basket ready for the climbing plants to cling to.

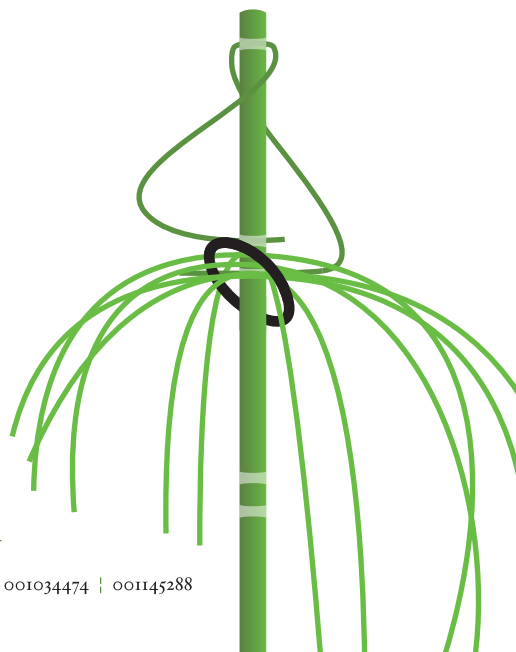

For video assembly instructions visit  
[www.touchwoodtoo.com](http://www.touchwoodtoo.com)